

Storing Your Honda

7. Inflate the tires to their recommended pressures.
8. Store your motorcycle in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
9. Cover your motorcycle with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

1. Uncover and clean your motorcycle.
2. If your motorcycle has been stored for more than four months — change the engine oil.
3. If your motorcycle has been stored for more than two months — drain and replace the fuel.
- 4 Lubricate the drive chain.
5. Perform a pre-ride inspection (page 25), then test-ride your motorcycle at low speeds.