

**NOTE:**

- \* Make sure the cut-out on the adjusting nut is seated on the brake arm pin.
  - \* If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.
4. Apply the brake several times and check for free wheel rotation when released.

Other Checks:

Make sure the brake arm, brake rod, spring and fasteners are in good condition.

