

REAR SUSPENSION

(Refer to the maintenance precautions on page 45).

Check the rear suspension periodically by careful visual examination. Note the following items.

1. Swingarm bearings should be checked by pushing hard against the side of the rear wheel. Free play indicates worn bearings.
2. Check all suspension component attaching points for security of their respective fasteners.
3. Check for oil leaks in the shock absorber units.

⚠ WARNING

- * **If any suspension components appear worn or damaged, consult your authorized Honda dealer for further inspection.**