

#### NOTE:


- \* Do not depress the brake pedal while the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

#### Installation notes:

- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (4) on the brake caliper is located in the slot (5) in the swingarm (6).
- Axle nut torque:  
93 N·m (9.5 kgf·m , 69 lbf·ft)
- Adjust the drive chain ( page 73 ).
- Apply the brake several times and check for free wheel rotation after the brake pedal is released.

#### **▲WARNING**

- \* If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

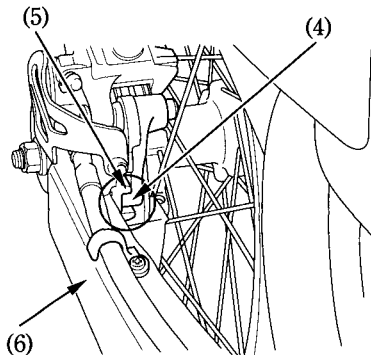

(4) Lug  
(5) Slot

(6) Swingarm