


## SIDE STAND

(Refer to the maintenance precautions on page 52).

Check the rubber pad for deterioration and wear. Replace if wear extends to the wear line (See (1) in the picture). Check the side stand assembly for freedom of movement. If parts must be replaced, please contact an authorized HONDA dealer.

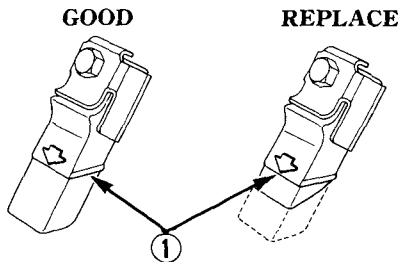

Replace if wear extends to any point of the wear line.

(1) Wear line