


HEADLIGHT AND TAILLIGHT

(Refer to the maintenance precautions on page 52).

Headlight Bulb:

1. Remove the three headlight mounting bands (1) and remove the front number plate (2).
2. Disengage socket from headlight (3).
Remove the bulb from the socket (4).

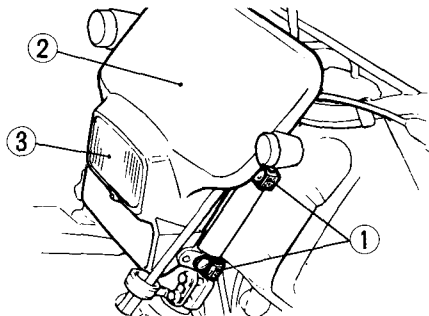


- (1) Bands
(2) Front number plate
(3) Headlight

3. Replace the headlight bulb (5) with a new one.
4. To install the headlight, reverse the removal procedure.

NOTE:

- * When installing the bulb, align the tab on the socket with the groove in the headlight.

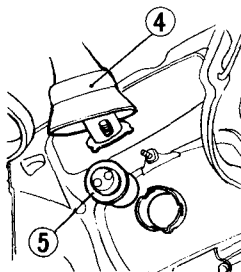

- (4) Socket
(5) Headlight bulb