


### Compression Damping:

The compression damping adjuster has at least 20 positions. Turning the adjuster one full turn advances the adjuster 4 positions.

To adjust to the standard position:

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 9-12 clicks until the punch mark (2) on the adjuster aligns with the reference mark (3). This is the standard position.

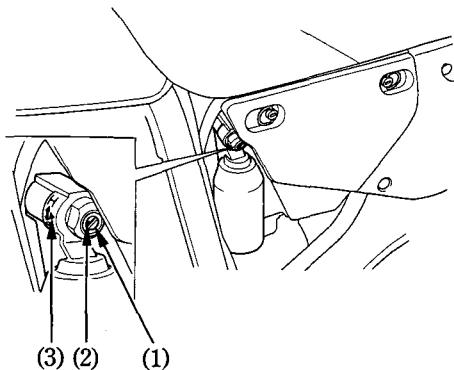

- (1) Damping adjuster
- (2) Punch mark
- (3) Reference mark