

Brakes

<Brake fluid check>

[Front]

Lean the motorcycle on the side stand on a flat and level surface. Turn the handlebar in order to level the top surface of the reservoir cap. The fluid level should be at or above the lower limit line.


[Rear]

Hold the motorcycle upright on a flat and level surface to align the brake fluid level with the level lines. The fluid level should be in between the maximum and the minimum lines.

Inspect the brake pads for wear if the fluid level is lower than its lower limit line. For inspection (see the next page).

If the brake pads are fine, check for brake fluid leakage. Consult your Honda dealer.

[Front]

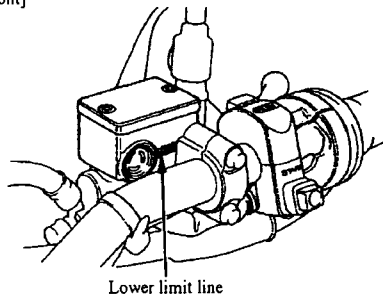

[Rear]

