


Compression damping:

This adjustment affects how quickly the fork compresses. The fork compression damping adjuster screw (1) has 16 positions (clicks) or more. Turning the adjuster screw one full turn changes the adjuster 4 positions. To adjust the adjuster to the standard position, proceed as follows:

1. Turn the adjuster screw clockwise until it stops, that is full hard.
2. Turn the adjuster screw counterclockwise one full turns to the standard position which is 8 positions back from full hard.
3. Make sure that both the right and left forks are adjusted in the same position.

CAUTION:

*** Always start with full hard when adjusting damping.**

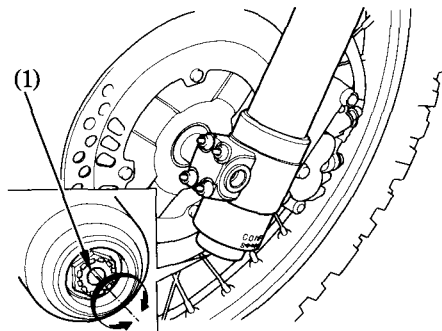

(1) Damping adjuster screw