


4. Install the filter with the rubber seal (5) facing out, away from the engine. You will see "OUT-SIDE" mark (6) on the filter body, near the seal.

**CAUTION:**

**\* Improper installation of the oil filter can cause serious engine damage.**

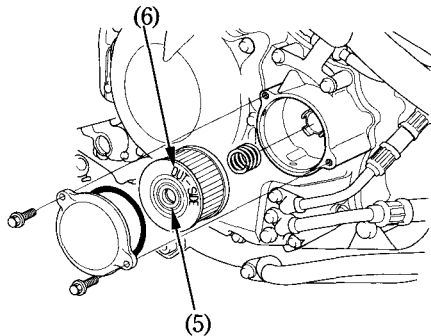

- (5) Rubber seal  
(6) OUT-SIDE mark

5. Reinstall the oil filter cover, making sure the bolts are tightened securely.

Oil Filter Bolt Torque:

12 N·m (1.2 kgf·m , 9 lbf·ft)

6. Perform steps 5 – 9 of Engine Oil Change.

Engine oil after draining and oil filter change:

1.8 ℓ (1.9 US qt , 1.6 Imp qt)