

# Operating Controls

## Ignition Switch


The ignition switch is used to prevent unauthorized use of the motorcycle.

Before riding, insert the key and turn it to the right for the ON position.

| Key Position | Function   | Key Removal                |
|--------------|--|----------------------------|
| OFF          | The engine cannot be operated.   | The key can be removed.    |
| ON           | With the engine stop switch at RUN and the transmission in neutral, the engine can be started. | The key cannot be removed. |

After parking the motorcycle, remove the key.

RIGHT SIDE (under fuel tank)

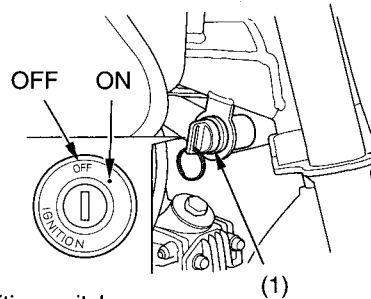

(1) ignition switch

