

Maintenance Schedule

Items	Frequency	Whichever Comes First		Initial Maint.	Regular Maint. Interval					Refer to page:	
		⇒	mi		100	600	1,200	1,800	2,400		
			km	150	1,000	2,000	3,000	4,000			
		Note	Month	1	6	12	18	24			
NON-EMISSION RELATED ITEMS		Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 month					100	
		Drive Chain Slider			I	I	I	I	101		
		Brake Shoe Wear			I	I	I	I	88		
		Brake System		I	I	I	I	I	85		
		Clutch System		I	I	I	I	I	72		
		Side Stand				I		I	99		
	*	Suspension				I		I	82		
	*	Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours					80
	*	Nuts, Bolts, Fasteners			I		I		I	—	
	**	Wheels/Tires			I	I		I	I	90, 95	
	**	Steering Head Bearings			I		I		I	—	

- * Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 146).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.