


DRIVE CHAIN SLIDER

(Refer to the maintenance precautions on page 63).

Check the chain slider (1) for wear. When the thickness of the chain slider reaches the limit, the chain slider must be replaced. See your Honda dealer. Chain slider thickness limit:

3.0 mm (0.12 in)

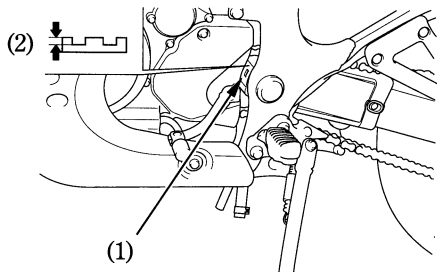

- (1) Chain slider
- (2) Thickness