


## WHEEL REMOVAL

(Refer to the maintenance precautions on page 63).

### Front Wheel Removal


1. Raise the front wheel off the ground by placing a support under the engine.
2. Remove the right and left bottom case covers (1) by removing the screws (2) and bolt (3), and releasing the tabs (4).

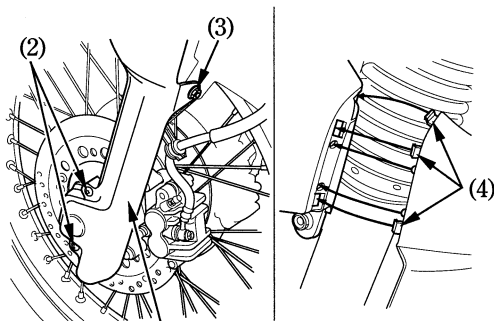

- (1) Left bottom case cover  
(2) Screws

- (3) Bolt  
(4) Tabs

3. Remove the speedometer cable set screw (5) and disconnect the speedometer cable (6).

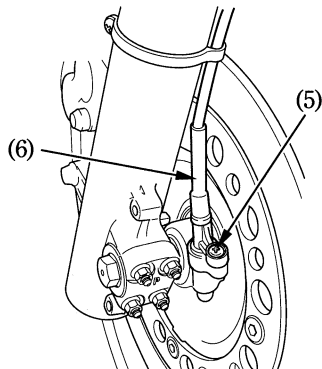

- (5) Set screw  
(6) Speedometer cable