


Rear brake

<Inspecting pedal play>

Push down on the rear brake pedal until resistance can be felt. Measure the play and confirm that the play is within the specified range by using a scale

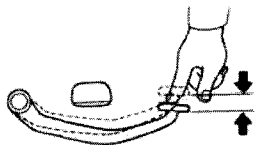

Rear brake lever play: 10-20 mm

Adjust the play if it is outside the specified range.

Adjustment

Adjust by tightening (or loosening) the brake arm adjuster.

*Adjustments should be carried out by half turns on the adjuster.

Adjuster

