

Easy maintenance

Air cleaner

This motorcycle has an oil based urethane foam air cleaner element fitted to it. The condition of the air cleaner element should be checked every 6 months.

<Air cleaner element removal and installation>

Removal

1. Remove the screw and then the air cleaner element cover.
2. Remove the air cleaner element.

Installation

- Reverse the removal procedure.

