



Display Setting

Setting Mode A

Following items to change sequentially  P.28

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Changing of speed and mileage unit
- Changing of coolant temperature gauge unit

Setting Mode B

Following items to change sequentially  P.32

- Setting of REV indicators
(blinking RPM setting, interval RPM setting and REV indicators brightness adjustment)
- Setting display mode of tachometer