


## 2 Backlight brightness adjustment:

You can adjust the brightness five levels.

- 1 Press **SEL** button. The brightness is switched.
- 2 Press **SET** button. The backlight is set, and then the display moves to the activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.

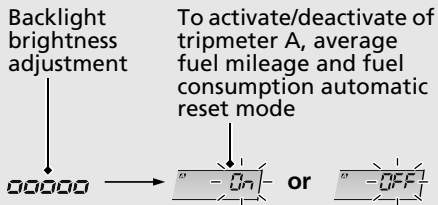

## 3 To activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refueling after low fuel indicator lights. Deactivation is initially set.

- 1 Press **SEL** button to select "ON" (activate) or "OFF" (deactivate) in the automatic reset mode.
- 2 To end the selection, press **SET** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the changing of the speed and mileage unit.

