


## Lower Fairing

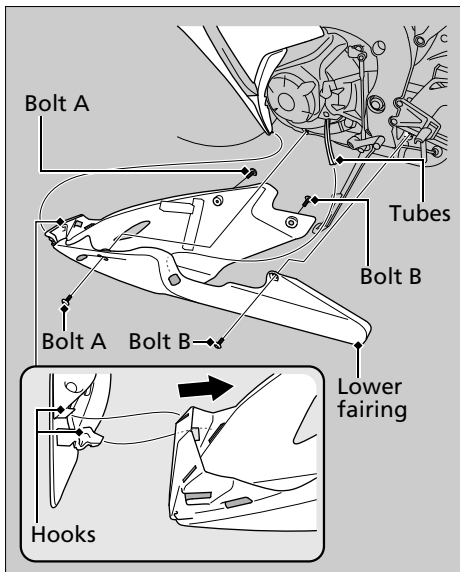

The lower fairing must be removed to change the oil filter.

### Removal

1. Remove the bolts A and bolts B.
2. Remove the lower fairing carefully release the guides from hooks of the middle fairing side as shown in the illustration.

### Installation

Install the parts in the reverse order of removal.

Route the tubes through the opening of the lower fairing.