











Items		Frequency*1							Refer to page		
		× 1,000 mi	0.6	4	8	12	16	20		24	
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4	
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	82
	Air Cleaner*2						R			R	68
	Crankcase Breather*3				C	C	C	C	C	C	83
	Spark Plug							R			-
	Valve Clearance							I			-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							64	
	Engine Oil Filter			R		R		R		R	66
	Engine Idle Speed			I		I		I		I	-
	Radiator Coolant*5					I		I		R	69
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
Evaporative Emission Control System*4						I			I	-	

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 122).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

C : Clean

L : Lubricate

R : Replace