

## Air temperature gauge

## Tachometer

### NOTICE


Do not operate the engine in the Tachometer red zone.  
Excessive engine speed can adversely affect engine life.


## Tachometer red zone

(excessive engine rpm range)

## Fuel gauge

Remaining fuel when only E (1st) segment starts flashing:

Approximately 0.95 US gal (3.6 L) 

Approximately 1.03 US gal (3.9 L) 

**If the fuel gauge indicator flashes:** 

### NOTICE

You should refuel when the reading approaches the E (1st) segment.  
Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

