

Instruments *(Continued)*


Volume

Selects the volume setting to automatically increase volume from the headsets as the speed of the vehicle increases.



To [Off] (disable), [Low] or [High] automatic volume function:

- 1 Select [Volume], and then press the **ENT** switch.
- 2 Select [Auto Volume], and then press the **ENT** switch.

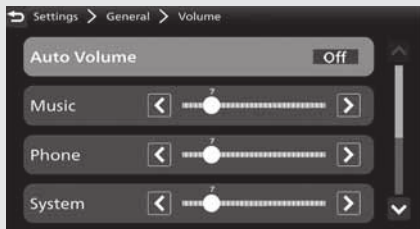

- 3 Press the **▲** sel up switch or **▼** sel down switch to set your selection.