



- ③ Return to the riding information, previous screen or Home screen. **P.38**

You can also perform the above settings by using the touch screen.

Default: [US English]

Restore Default Settings

The set values can be returned to default settings.



- ① Select [Restore Default Settings], and then press the **ENT** switch.