

Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." 2 P. 237

Fuse Box Fuses & ABS FSR Fuse

1. Remove the front seat. 2 P. 251
2. Open the fuse box covers.
3. Pull the fuses out with the fuse puller provided on the underside of the rear seat (2 P. 222) one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box covers.
5. Reinstall the front seat.

