

Maintenance Schedule

Items		Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval						Refer to page:
					mi	100	600	1,200	1,800	2,400	
					km	150	1,000	2,000	3,000	4,000	
					Note	Month	1	6	12	18	
*	Fuel Line					I		I		–	
**	Fuel Filter			R: every 4,800 mi (8,000 km)						–	
*	Throttle Operation					I		I		69	
	Air Cleaner	Note 1			C	C	C	C		64	
	Crankcase Breather				I	I	I	I		68	
	Spark Plug				I	I	I	I		75	
*	Valve Clearance			I	I	I	I	I		–	
	Engine Oil			R	R	R	R	R		57	
	Engine Oil Filter			R	R	R	R	R		–	
**	Engine Idle Speed			I	I	I	I	I		–	

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 158).

** In the interest of safety, we recommend these items be serviced only by your dealer.