


# Side Cover Removal

Refer to *Safety Precautions* on page 39.

## RIGHT SIDE

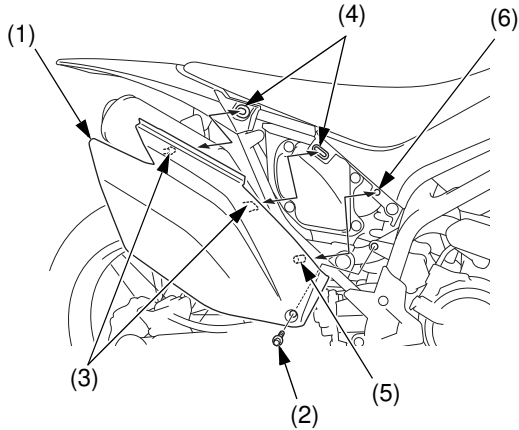

(1) right side cover  
(2) bolt  
(3) prongs

(4) rubber grommets  
(5) boss  
(6) hole

The right and left side covers can be removed in the same manner.

The right side cover (1) must be removed to service the air cleaner.

The left side cover must be removed to service the battery, main fuse and sub fuse.

### Removal

1. Remove the bolt (2).
2. Pull out the prongs (3) from the rubber grommets (4), and the boss (5) from the hole (6) on the shroud.

### Installation

1. Slide the top of the side cover under the bottom edge of the seat.
2. Align the prongs with the rubber grommets, and the boss with the hole on the shroud.
3. Install the bolt and tighten it securely.