

ADJUSTMENTS FOR COMPETITION ...	139	TIPS.....	161	INDEX	190
Engine Mode Select Button	140	Transporting Your Motorcycle	162	QUICK REFERENCE	
Current Mode	140	Storing Your Honda	163		
Mode Selection.....	140	Preparation for Storage	163		
Honda Selectable Torque Control	141	Removal from Storage.....	163		
Current Mode	141	You & the Environment	164		
Mode Selection.....	141	Troubleshooting	165		
HRC-Launch Control System	142				
Front Suspension Adjustments	143	TAKING CARE OF THE			
Front Suspension Air Pressure	143	UNEXPECTED	167		
Front Suspension Damping	144	If a Fuse Blows	168		
Fork Springs	144	If Your Battery Is Low (or Dead)	169		
Fork Oil Adjustment.....	145				
Rear Suspension Adjustments	146	TECHNICAL INFORMATION.....	171		
Rear Suspension Spring Pre-Load.....	146	Vehicle Identification	172		
Rear Suspension Damping	147	Serial Numbers	172		
Rear Suspension Race Sag	149	Specifications	173		
Suspension Adjustments for Track		Torque Specifications	175		
Conditions	151	Nuts, Bolts, Fasteners	175		
Suspension Adjustment Guidelines	152	Oxygenated Fuels	178		
Tuning Tips	155	Competition Logbook	179		
Spark Plug Reading.....	155	Optional Parts List	181		
Chassis Adjustments	156	Spare Parts & Equipment	182		
Rear End.....	156	Spare Parts	182		
Fork Height/Angle.....	156	General Tools.....	182		
Wheelbase	156	Honda Special Tools.....	182		
Gearing	157	Chemical Products	182		
Tire Selection for Track Conditions	158	Other Products	182		
Personal Fit Adjustments	159	Wiring Diagram	183		
Control Positioning	159				
Handlebar Position, Width & Shape	159	CONSUMER INFORMATION	185		
		Authorized Manuals	186		
		Contacting Honda	187		
		Your Honda Dealer	188		