


## Instruments (Continued)

### Vehicle Information

#### Average Fuel Mileage (Trip A/Trip B) [Fuel Consumption (Avg.)]

Displays the average fuel mileage since the individual tripmeter was reset.

The average fuel mileage will be calculated based on the mileage of the individual tripmeter.

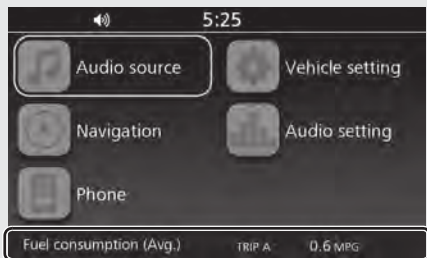

**Display range:** 0.1 to 99.9 MPG (L/100 km or km/L)

- If less than 0.1 MPG (L/100 km or km/L) or more than 99.9 MPG (L/100 km or km/L): "--.-" is displayed.
- When tripmeter A or B is reset: "--.-" is displayed.

When "--.-" is displayed except for the above-mentioned cases, go to your dealer for service.

**To change the unit:** P.30

**To reset the average fuel mileage:** P.36

#### Current Fuel Mileage [Fuel Consumption (Inst.)]

Displays the instantaneous fuel mileage as a bar graph in MPG, L/100 km or km/L.



Bar graph

- When your speed is less than 2 mph (3 km/h): The bar graph is not activated.

When the bar graph is not activated except for the above-mentioned cases, go to your dealer for service.

**To change the unit:** P.30

### Elapsed Time

Displays operating time since the engine was started. (hours : minutes)



- Above 99:59: returns to 00:00.

When the ignition switch is turned OFF, the elapsed time is reset.