


Available Driving Distance [RANGE] & Tire Pressure Gauge [(---) FR/RR] Display

GL1800B/BD

Available driving distance is only displayed.

GL1800/D/DA

To select Available driving distance, Tire pressure gauge FR or RR, press **SET** button when the cursor is at the Available driving distance and Tire pressure gauge display.

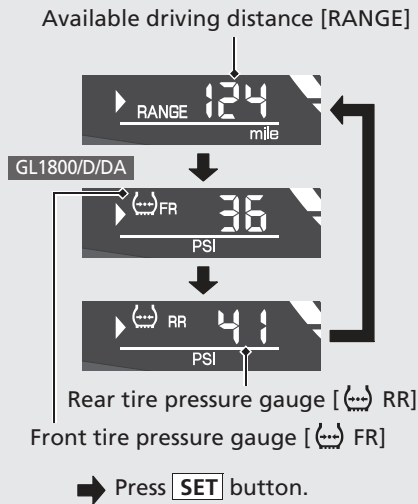

- 1 Press **SEL** button to move the cursor to the available driving distance and tire pressure gauge display.
- 2 Press **SET** button to select the available driving distance, front tire pressure gauge or rear tire pressure gauge.

Available Driving Distance [RANGE]

Displays the estimated distance you can travel on the remaining fuel.

The indicated available driving distance is calculated based on the driving conditions, and the indicated figure may not always be the actual available distance.

- Initial display (factory shipped): “---” is displayed until riding for 4 minutes at 2 mph (3 km/h) or more.
- After the second time, when the amount of remaining fuel does not change, the last driving distance is displayed. When the amount of remaining fuel is changed, recalculate and update the available driving distance.
- When the calculated distance is below 3 mile (5 km) or the amount of remaining fuel is below 0.26 US gal (1.0 liters): “---” is displayed.

When “---” is displayed except for the above-mentioned cases, go to your dealer for service.