

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on while riding:

►P. 178

→P.179