
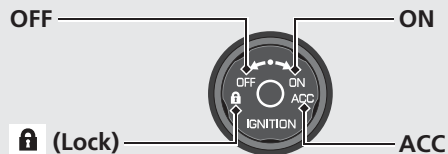


## Ignition switch

 
Switches the electrical system on/off, locks the steering.

Make sure that the Honda SMART Key is activated  P. 56


and enter the operating range.  P. 57




### (Lock)




### OFF

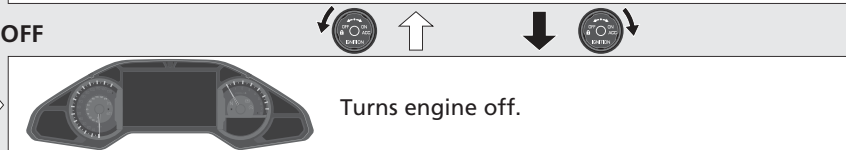



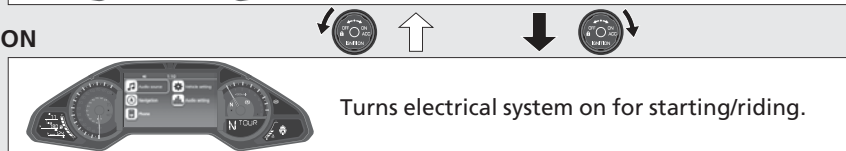

### ON

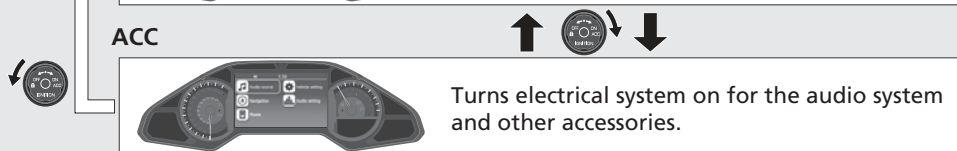

### ACC



  : Turning the ignition switch clockwise.

  : Turning the ignition switch counterclockwise.