Audio System (Continued)

When you push **VOL** lever up or down, the volume control level appears on the information bar.



— Information bar

To increase the volume: push **VOL** lever up.

To increase the volume rapidly, push up and hold **VOL** lever.

To decrease the volume: push **VOL** lever down.

To decrease the volume rapidly, push down and hold **VOL** lever.

VOLUME level range: Level 0 to 30



To mute the volume: Press and hold wx switch.

A diagonal line appears in the audio output status icon on the screen.



Audio output status icon

To resume the volume: Operate **VOL** lever while volume is muted.