

## Audio System (Continued)

### Volume


Adjusts the volumes in the following modes individually.

[Audio vol.]/[Navi vol.]/[Ring tone vol.]/  
[Phone vol.]/[CB vol. (option)]

This setting is reflected as each volume of the audio output device (speakers and headsets) at that time. Select the audio output device before settings. ➔P.71



- 1 Select [Volume], and then press or **ENT** switch.
- 2 Rotate or press  $\blacktriangle$  /  $\blacktriangledown$  on the 4-way key switch to select the mode that you want to adjust the volume, and then press or **ENT** switch to set your selection.

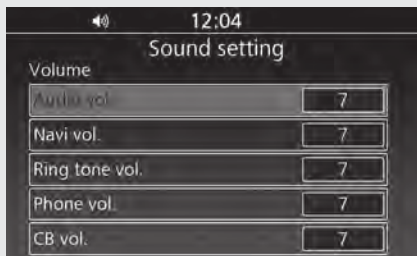

- 3 Rotate or press  $\blacktriangle$  /  $\blacktriangledown$  on the 4-way key switch to select your preferred level.



- 4 Return to the previous screen or the Home screen. ➔P.24

**VOLUME level range:** Level 0 to 30  
**Default:** Level 7

Each volume can also be adjusted in individual modes. ➔P.71

### CB Roger Beep

Roger Beep is a beep sound that is sent to notify you of the end of transmission.

This function is optional. Contact your dealer for details.