

Torque Control Indicator

GL1800/D/DA

If the indicator operates in one of the following ways, you may have a serious problem with the Torque Control. Reduce your speed and have your motorcycle inspected by your dealer as soon as possible.

- Indicator comes on while riding.
- Indicator does not come on when the ignition switch is turned on.
- Indicator does not go off at speeds above 3 mph (5 km/h).

Even when the Torque Control indicator is on, your motorcycle will have normal riding ability without Torque Control function.

► When the indicator comes on while the Torque Control is in operation, you will have to completely close the throttle to regain normal riding ability.

The Torque Control indicator may come on if you rotate the rear wheel while your motorcycle is lifted off the ground. In this case, turn the ignition switch to OFF and then ON again. The Torque Control

indicator will go off after your speed reaches 3 mph (5 km/h).

Honda SMART Key Indicator

■ If the Honda SMART Key Indicator Flashes 5 times When the Ignition Switch is Turned ON

Replacing the Honda SMART Key Battery 📖 P. 174

■ When the Honda SMART Key Indicator is Flashing While the Electrical System is On

The Honda SMART Key indicator flashes when communication between your motorcycle and Honda SMART Key stops after turning on the ignition switch.

It is probably caused by the following:

- Strong radio waves or noise are affecting the system
- You lost the Honda SMART Key while riding

However, this does not affect the operation of your motorcycle until the ignition switch turned OFF.

You may not be able to turn off the electrical system when losing the Honda SMART Key while riding, or if the battery is low, or because the system is affected by strong radio waves or noise. If this occurs, turn the ignition switch counterclockwise and hold it until the electrical system shut off.

If you do not have the Honda SMART Key, the electrical system can be activated by means of emergency procedures. 📖 P. 189