

# Audio Systems


## VOLUME Control

- To increase the volume — push the VOLUME lever up or turn the VOLUME knob/button clockwise.
- To decrease the volume — push the VOLUME lever down or turn the VOLUME knob/button counterclockwise.


To increase or decrease the volume rapidly — push the VOLUME lever up or down and hold it down.

(VOLUME level range: from 0 to 30)


(Models not equipped with Navigation System)

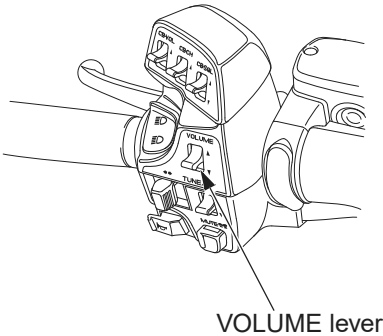

(Models equipped with Navigation System)

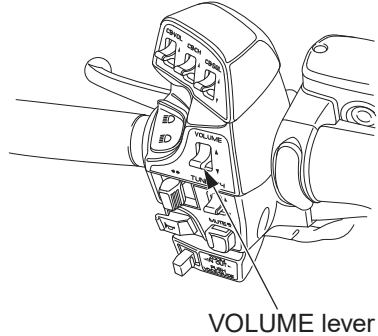

VOLUME knob/button

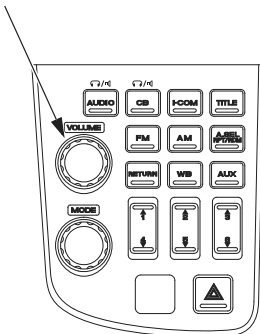

VOLUME knob/button

