

# Spark Plugs

## Spark Plug Recommendation

standard spark plug	BKR6E-11 (NGK) or K20PR-U11 (DENSO)
for cold climate (below 5°C, 41°F)	BKR5E-11 (NGK) or K16PR-U11 (DENSO)
for extended high speed riding	BKR7E-11 (NGK) or K22PR-U11 (DENSO)

Use only the recommended type of spark plugs in the recommended heat range.

### NOTICE

*Using spark plugs with an improper heat range can cause engine damage.*

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 154.

1. Remove the left and right cylinder head side cover (page 169).
2. Clean any dirt from around the spark plug bases.
3. Disconnect the spark plug caps. Take care to avoid damaging the spark plug wire when disconnecting the caps.
4. Using a spark plug wrench provided in the tool kit (Canada model only), remove the spark plugs.

