

## Engine

Number .....	161
Oil .....	88, 105
Oil Filter .....	107
Overheats .....	131
Starting .....	58
Stop Switch .....	51, 53, 58, 153
Stopping .....	153
Will Not Start .....	130

<b>Environment</b> .....	160
--------------------------	-----

## Equipment

Owner's Manual .....	73
Tool Kit .....	73

## F

<b>Flooded Engine</b> .....	59
-----------------------------	----

## Fuel

Recommended .....	70
Tank Capacity .....	70

<b>Fuses</b> .....	87, 148
--------------------	---------

## G

<b>Gasohol</b> .....	167
----------------------	-----

<b>Gasoline</b> .....	69
-----------------------	----

## H

<b>Hazard Switch</b> .....	50, 52
----------------------------	--------

<b>Headlight</b> .....	146
------------------------	-----

<b>Headlight Aim</b> .....	127
----------------------------	-----

<b>Headlight Dimmer Switch</b> .....	50, 52
--------------------------------------	--------

<b>Helmet Holder</b> .....	74
----------------------------	----

<b>High Beam Indicator</b> .....	48
----------------------------------	----

<b>High Coolant Temperature Indicator</b> .....	48
---	----

<b>Honda Contacts</b> .....	171
-----------------------------	-----

<b>Horn Button</b> .....	50, 52
--------------------------	--------

## I

### Ignition Cut-off System

Banking Sensor .....	154
----------------------	-----

Side Stand .....	116
------------------	-----

<b>Ignition Key</b> .....	152
---------------------------	-----

<b>Ignition Switch</b> .....	51, 58, 153
------------------------------	-------------

<b>Indicators</b> .....	48
-------------------------	----

<b>Information Record</b> .....	177
---------------------------------	-----

<b>Instruments</b> .....	22
--------------------------	----

### Instruments, Controls, & Other

Features .....	153
----------------	-----