


Seat

Driver Seat Position Adjustment

The driver seat can be adjusted to suit the drivers preference. Adjust the drivers seat to the desired position that allows the driver to maintain full control of the vehicle.

The driver should be able to sit upright with back against the seat-back, be able to properly reach the pedals, and be able to grip the steering wheel comfortably with both hands.

Allow sufficient space between the center of the steering wheel and drivers chest.

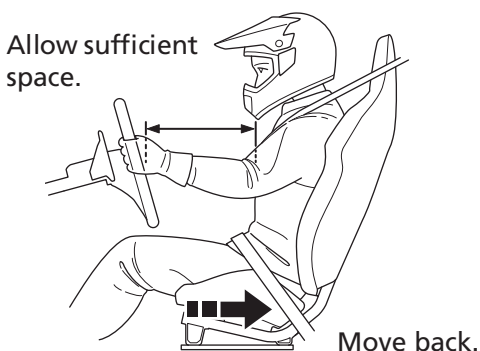

Always make driver seat adjustment before driving.
The passenger seat does not have a seat position adjustment.