

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
ITEMS	FREQUENCY (Whichever comes first)	x100 mi x100 km Hours	Initial maintenance	Regular maintenance interval						Note	Refer to page
			1	6	12	18	24	30	36		
Check engine oil and coolant			t	6	12	18	24	30	36		132, 152
Check tires			Check inflation and condition once a month							183	
Check side net and mounting hardware			t	t	t	t	t	t	t		50
Check brake fluid			Check fluid level once a month							177	
Replace engine oil and oil filter			t								134
Check sub-transmission oil			t		t						142
Replace sub-transmission oil				Every 2 years (regardless of mileage)							144
Replace DCT oil filter			t			t					139
* Inspect valve clearance			t			t			t	1	—
* Clean spark arrester				t	t	t	t	t	t		169
Replace air cleaner element				t	t	t	t	t	t	2	157
Check air cleaner housing drain tube				t	t	t	t	t	t	3	159
Check spark plugs					t		t		t		166
* Inspect idle speed			t			t			t		—
* Check fuel lines and connections						t			t		—
Check front and rear brakes			t			t			t	3	176
Replace front and rear final gear oil			t			t			t		147, 149

* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 260).

Note 1 Inspect valve clearance as needed, if engine is noisy.

Note 2 Service more frequently when operating in dusty areas, sand or snow.

Note 3 Service more frequently when operated in muddy conditions.