


Maintenance Component Locations

- Indicates something visible.
-→ Indicates something concealed.

driver seat
(page 122)

passenger seat
(page 122)

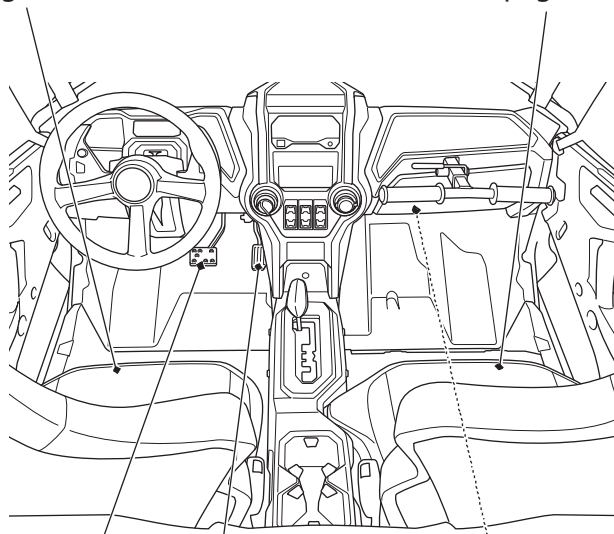

brake pedal
(page 180)

owner's manual
(page 120)

accelerator pedal
(page 164)