

Air Cleaner Outer Cover Removal

Refer to *Safety Precautions* on page 107.

The air cleaner outer cover must be removed to replace the air cleaner and to add the engine oil.

Removal

1. Turn the knobs 1/4 clockwise or 1/4 counterclockwise to the unlock positions.
2. Remove the prong from the grommet.
3. Remove the air cleaner outer cover upward.

Installation

1. Insert the hooks into the slots.
2. Insert the prong into the grommet.
3. Turn the knobs 1/4 counterclockwise or 1/4 clockwise to the lock position.

IN FRONT OF CARGO BED

