

Rear Final Gear Oil

7. Install the oil check bolt with a new sealing washer and tighten to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)
8. Apply a thin coat of grease to a new O-ring, and insert it into the oil fill cap groove.
9. Install and tighten oil fill cap to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)
10. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 211).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

RIGHT REAR

