


# Lubrication

---

Lubricate the shift select lever pivots as shown in the following illustration.

## CENTER CONSOLE

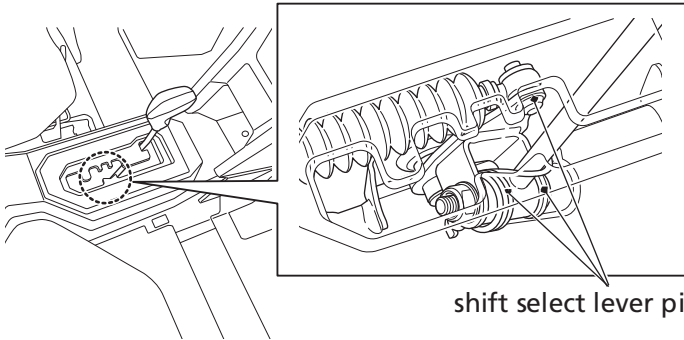

Lubricate the door latch as shown in the following illustration. Open the door (page 48).

## LEFT SIDE (right side similar)

