If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but runs poorly.	
POSSIBLE CAUSE	WHAT TO DO
high coolant	Check the high coolant
temperature	temperature indicator. Refer
	to If the High Coolant
	Temperature Indicator Lights,
	page 226.
runs erratically, misfires	May damage catalytic
	converter. See your dealer.
blubbers (rich fuel	See your dealer.
mixture)	
sooty exhaust (rich fuel	See your dealer.
mixture)	
detonates or pings	If applicable, switch to the
under load	recommended octane gasoline
	(page 126) or change your
	brand of gasoline. If the
	problem persists, see your
	dealer.
afterfires (backfires)	May damage catalytic
	converter. See your dealer.
pre-ignition (runs on	May damage catalytic
after ignition switched	converter. See your dealer.
OFF)	

SYMPTOM: Engine starts, but runs poorly or dies when hot.	
POSSIBLE CAUSE	WHAT TO DO
poor or inadequate	See your dealer.
fuel flow due to	(ensure clean fuel supply)
clogged fuel filter	