

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
			HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	135
	AIR CLEANER	NOTE 1			C	C	129
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	134
	SPARK PLUG				I	I	138
*	VALVE CLEARANCE				I	I	141
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			111
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			116
*	ENGINE IDLE SPEED			I	I	I	—
*	RADIATOR COOLANT	NOTE 3			I	I	123
*	COOLING SYSTEM	NOTE 2			I	I	—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 226).