

Indicators & Displays

Fuel Gauge

The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:

3.96 US gal (15.0 ℓ)

TRX500FE:


When segment RES (2) flashes, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

0.66 US gal (2.5 ℓ)

TRX500FPE:

When segment E (3) and low fuel indicator (4) flash, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

0.66 US gal (2.5 ℓ)

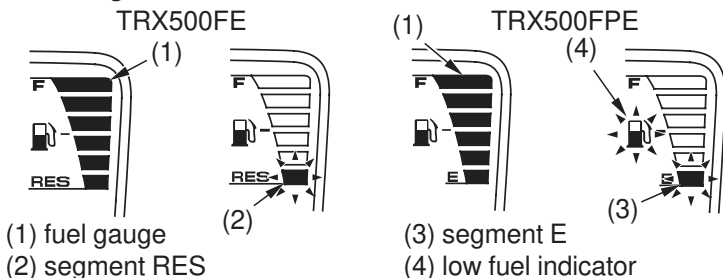

All segments will flash, when the fuel gauge function is fails. See your Honda dealer.

TRX500FE



TRX500FPE

