

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔	INITIAL		REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL	MAINT.	INTERVAL	
			km	1000	2000		
			mi	100	600	1200	
	MONTH	1	6	12			
	NOTE	HOURS	20	100	200		
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		133
*	CARBURETOR CHOKE				I		135
	AIR CLEANER	NOTE 1			C	C	127
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	132
	SPARK PLUG				I	I	139
*	VALVE CLEARANCE			I	I	I	142
	ENGINE OIL			INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R			114
	ENGINE OIL FILTER			REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			119
*	ENGINE IDLE SPEED			I	I	I	138

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).