

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	154	
	AIR CLEANER	NOTE 1				C	148	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	153	
	SPARK PLUG					I	158	
*	VALVE CLEARANCE					I	161	
	ENGINE OIL					I	127	
	ENGINE OIL FILTER					R	132	
*	ENGINE IDLE SPEED					I	—	
	RADIATOR COOLANT	NOTE 3				I	140	
*	COOLING SYSTEM	NOTE 2				I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).