

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
			mi	100	600	1200				
			km	150	1000	2000				
			MONTH	1	6	12				
	NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—		
*	THROTTLE OPERATION					I		161		
	AIR CLEANER	NOTE 1			C	C		155		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I		160		
	SPARK PLUG				I	I		164		
*	VALVE CLEARANCE			I	I	I		167		
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R				133		
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R				138		
*	ENGINE IDLE SPEED			I	I	I		—		
*	EVAPORATIVE EMISSION CONTROL SYSTEM (For AC type)	NOTE 4		I: EVERY 2 YEARS				—		
	RADIATOR COOLANT	NOTE 3			I	I		147		
*	COOLING SYSTEM	NOTE 2			I	I		—		

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 254).