

# Maintenance Component Locations

---

battery  
fuse box  
main fuse 1  
main fuse 2  
EPS fuse


front suspension spring  
pre-load adjuster

seat latch

coolant reserve tank

fuel fill cap

air cleaner

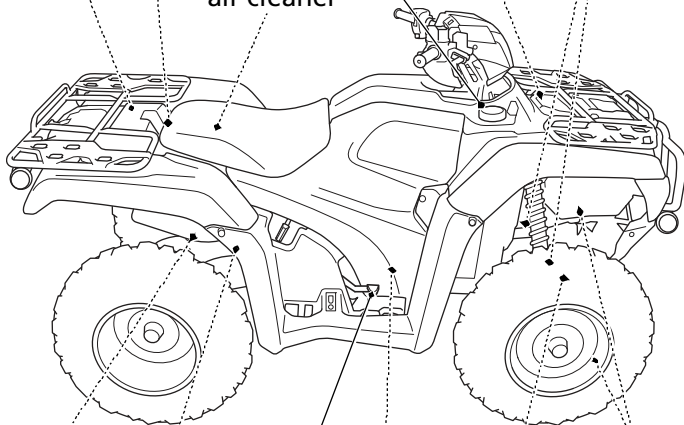

rear brake light  
switch

engine  
oil filter

front brake  
caliper

air cleaner housing  
drain tube

front final gear oil fill cap  
front final gear oil drain bolt

rear brake pedal